


## Dante AVIO Adapters - LED Function

The LEDs on the adapter's Ethernet port indicate various states, as shown below.

FUNCTION	LEFT LED	RIGHT LED	COMMENT
Off	OFF	OFF	No Power
Device is booting	Solid GREEN	Solid RED	-
Slave with sync	Blinking GREEN	Solid GREEN	Normal operation
Clock Master	Blinking GREEN	Blinking GREEN	Normal operation
Acquiring clock sync / runtime error	Blinking GREEN	Blinking RED	Normal operation
Identify (Dante Controller function)	Alternating RED and GREEN	Alternating RED and GREEN	Blinking for 6 seconds (cycle every 0.5 seconds)
Failsafe (bootloader)	Blinking RED	Blinking RED	Failsafe, corrupt capability (red device name in Dante Controller)
Upgrade (bootloader)	Blinking ORANGE	Blinking ORANGE	Device is upgrading
Network cable disconnected	Solid GREEN	Solid RED	USB adapter only, on USB power

**Note:** Left and right refer to the LEDs when the adapter is face-up, and you are looking at the RJ45 connector as shown below.

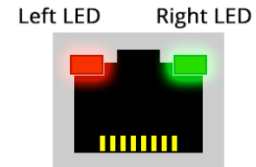

If your adapter is malfunctioning and displays an LED state not listed above, please [contact Audinate Technical Support](#).